



Product Improvement Centre
Shower Head Plates & Seal
EM6910

How to remove shower head plates and seal


Tools required:



Stubby Philips Head Screw Driver




Long Nose Pliers


Step # 1 


Turn the machine upside down. Remove the screw using the screw driver




Step # 2 

Lift the outer shower & remove the part from the group head assembly. (Note: In some cases this part is hard to remove if no regular cleaning done to the machine.)

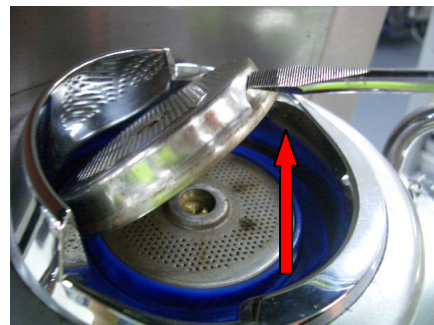

Step # 3 

Lift and remove the inner shower head plate from the group head assembly. This can be done easily by inserting any tool into the centre hole and wedge your tool to the rim of the collar while lifting.

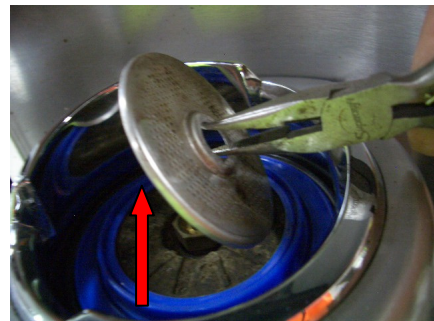



Product Improvement Centre


Shower Head Plates & Seal

EM6910

Step # 4

Remove the blue seal using a pair of long nose pliers. If you intend to re-use the seal, care should be taken so as not to damage the seal. **Tip:** Wrap the tip of the pliers with a tape.

Note: Customer does not need to remove brew head nut.

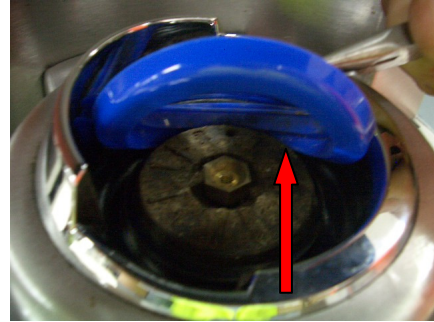

How to re-fit shower head plates and seal.

Step # 1

Replace the inner shower plate into the blue seal. Make sure it sits correctly into the groove of the seal.




Step # 2

Replace the outer shower plate on top of the inner shower plate. Make sure it sits correctly into the groove of the seal.



Step # 3

Replace the pre-assembled parts into the group head. Screw into place.

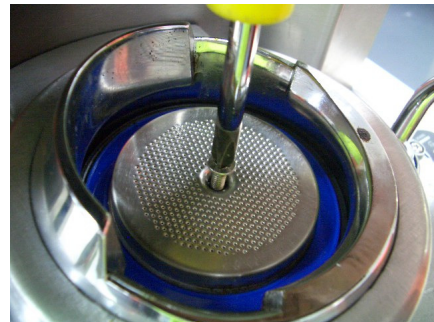

Important: This procedure doesn't apply to EM6900 machine.